



CAR AUDIO AFTERMARKET

Instructions for JBL BassPro Go Software Update to V2, for compatibility with your new JBL BassPro Go Home Power Adapter



HARDWARE NEEDED FOR SOFTWARE UPDATE

BassPro Go Power Cable &
Power Source



USB to USB Mini Cable
capable of data transfer



BassPro Go Speaker



Windows Computer





DOWNLOADING SOFTWARE FOR UPDATING BASSPRO GO

- 1) Download "BassPro Go SW Update Tools.zip" and save to your Windows PC
- 2) Un-zip the compressed file "BassPro Go SW Update Tools.zip", using 7-Zip or other software, and save in the desired location
- 3) Open "BassPro Go SW Update Tools" folder in your saved location
- 4) Double-check to make sure two folders are included inside this folder:
 - 1) "Application Tool to Flash Device"
 - 1) The Application Tool within this folder is used to communicate with your BassPro Go speaker and updates your speakers' firmware. You will open this folder and use the application file embedded within the folder when prompted during the software upgrade process outlined below.
 - 2) "DFU File to Update Software"
 - 1) The DFU file within this folder is used to by the Application Tool to flash and update your BassPro Go speaker. You will need to open this folder when prompted by the Application Tool during the software upgrade process outlined below.
- 5) Continue to next steps before opening the Application Tool and attempting to update BassPro Go.
 - 1) The Application Tool cannot be open during the hardware setup process outlined below. If it is open when connecting the hardware, and setting up the speaker for software update, the software may not be able to recognize the speaker and upgrade your BassPro Go successfully.



CONNECT POWER & USB CABLE

Prepare cables for plug-in to BassPro Go speaker

NOTE: harness must be connected to power/ground/remote with a 12V power source (vehicle battery or power supply)

Connect USB cable to Windows laptop.





CONNECT POWER & USB CABLE

Change turn-on mode to “12V”, if needed.



Insert speaker connector and USB mini to “SERVICE” port.






ENTERING SOFTWARE UPDATE MODE

Turn on power source and power the BassPro Go

NOTE: Speaker must be in subwoofer mode with power indicator showing white LED (green LED indicates the speaker is in full-range mode)

Press and hold volume down “-” & play/pause until all lights are flashing simultaneously, up to 10s.

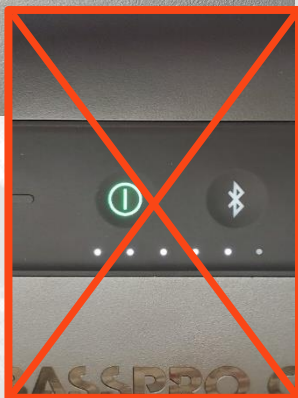




SOFTWARE UPDATE MODE IS ESTABLISHED WHEN ALL LED'S ARE FLASHING OFF/ON

Blinking LED Off

Blinking LED On

Blinking LED Off

Blinking LED On

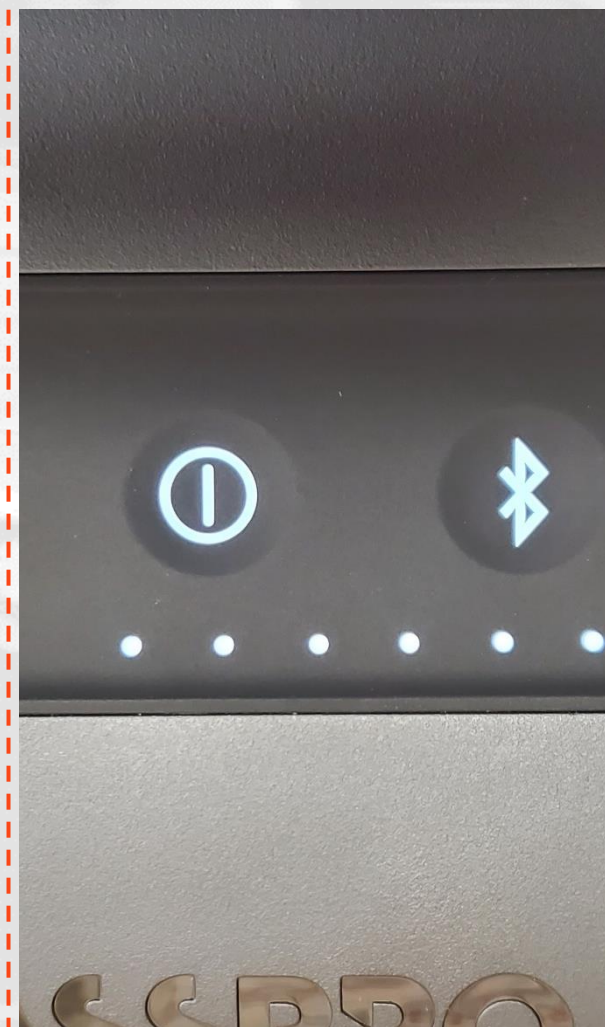





OPENING SOFTWARE UPDATE APPLICATION

Double-Click to Open HidDfuUI Application Software in
“Application Tool to Flash Device” folder

NOTE: BassPro Go speaker LED's must be flashing off/on
as noted in previous instruction

Open the device from the device list & select “OK”

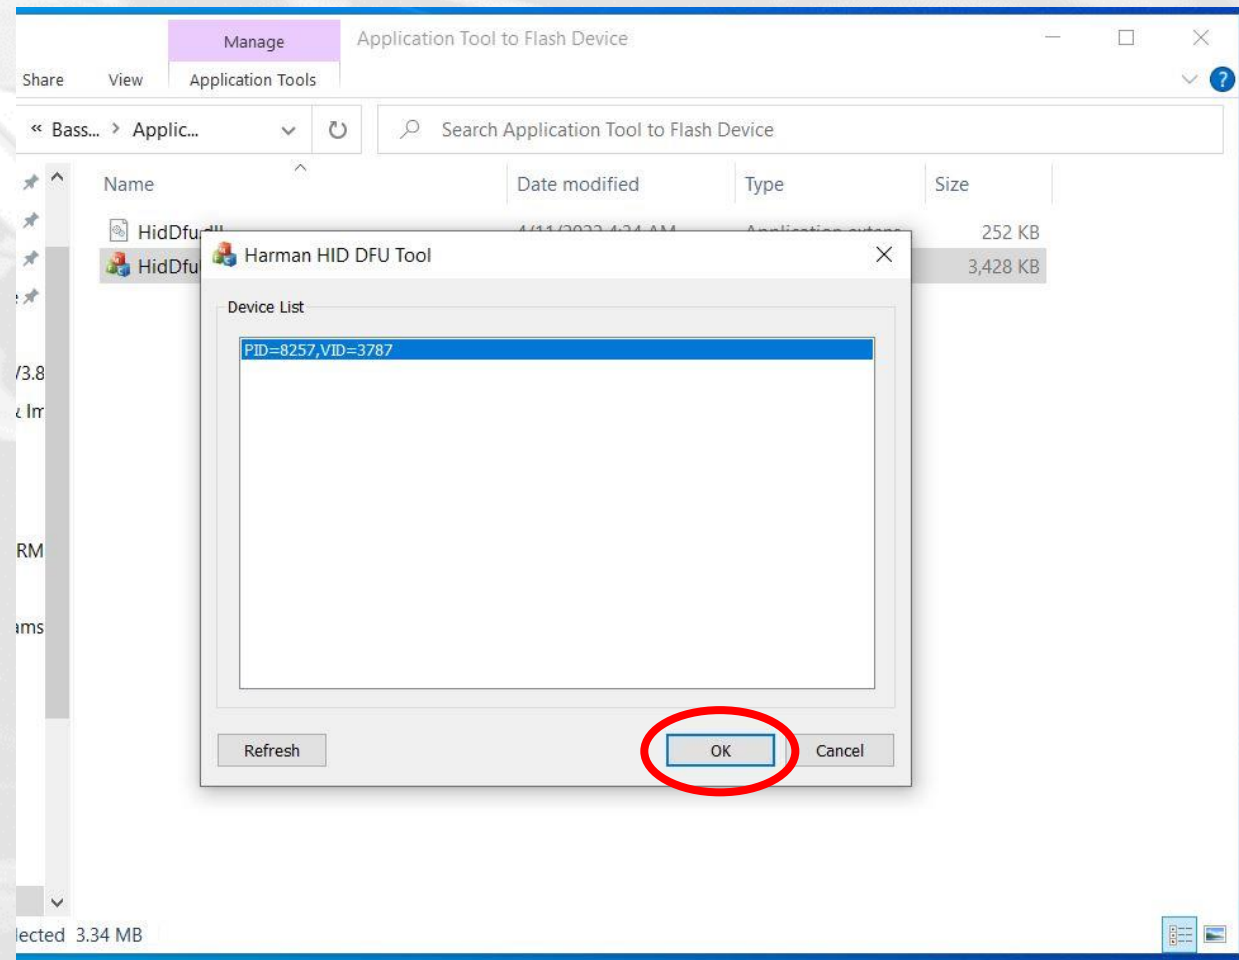
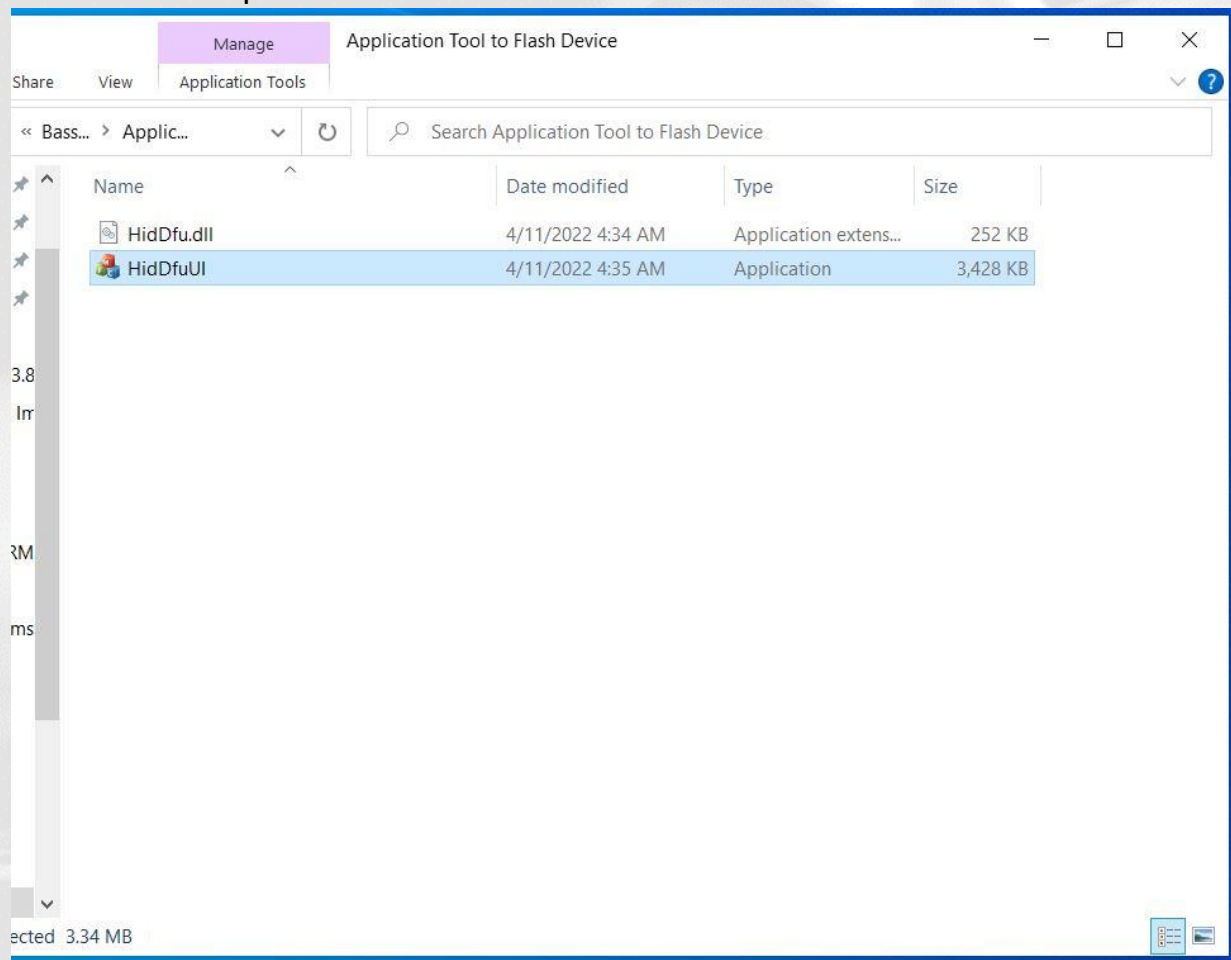




SELECTING FIRMWARE FOR UPDATING THE SPEAKER

Open browser & locate the “DFU File” in the folder named “DFU File to Update Device”


Select “DFU File” and Open the file

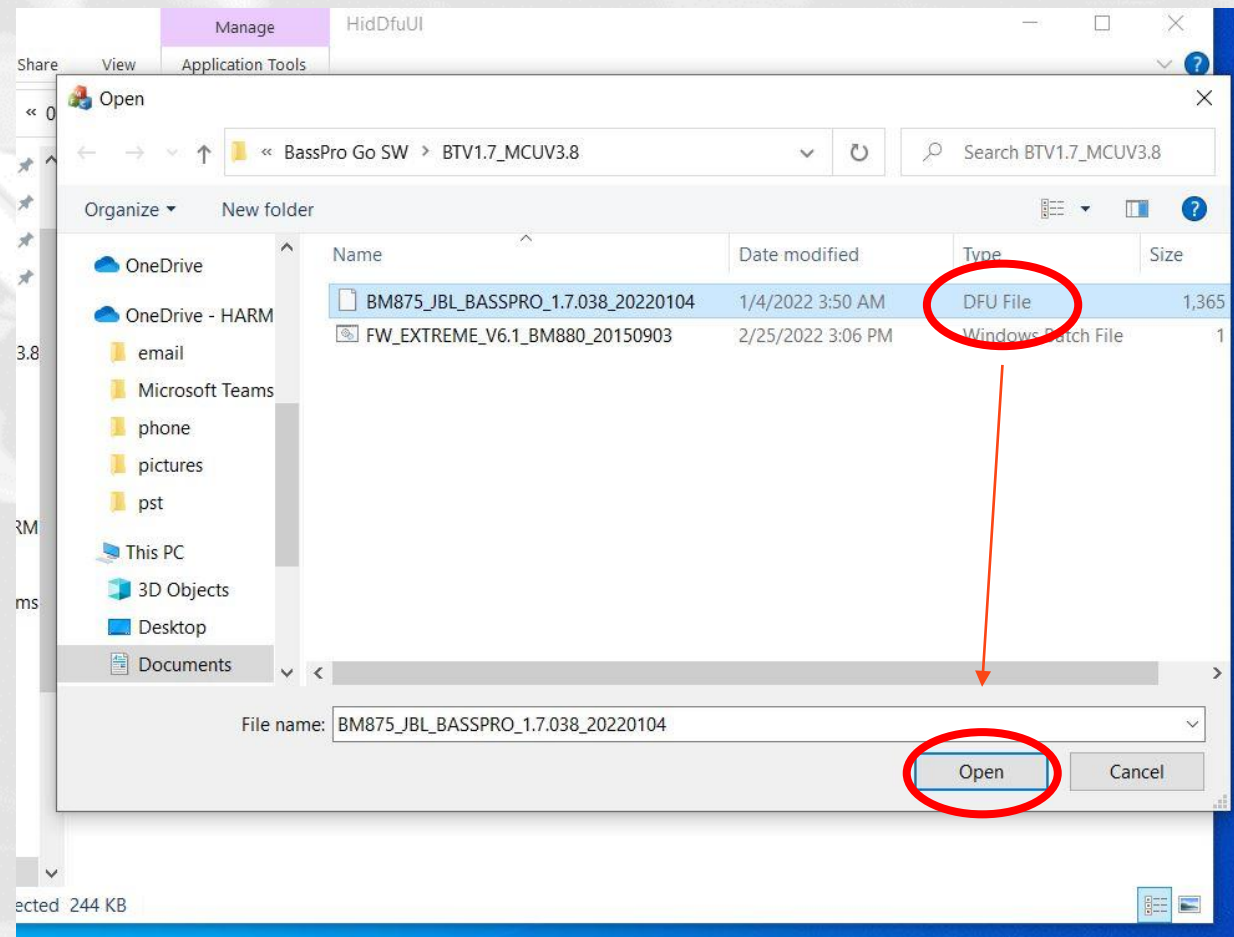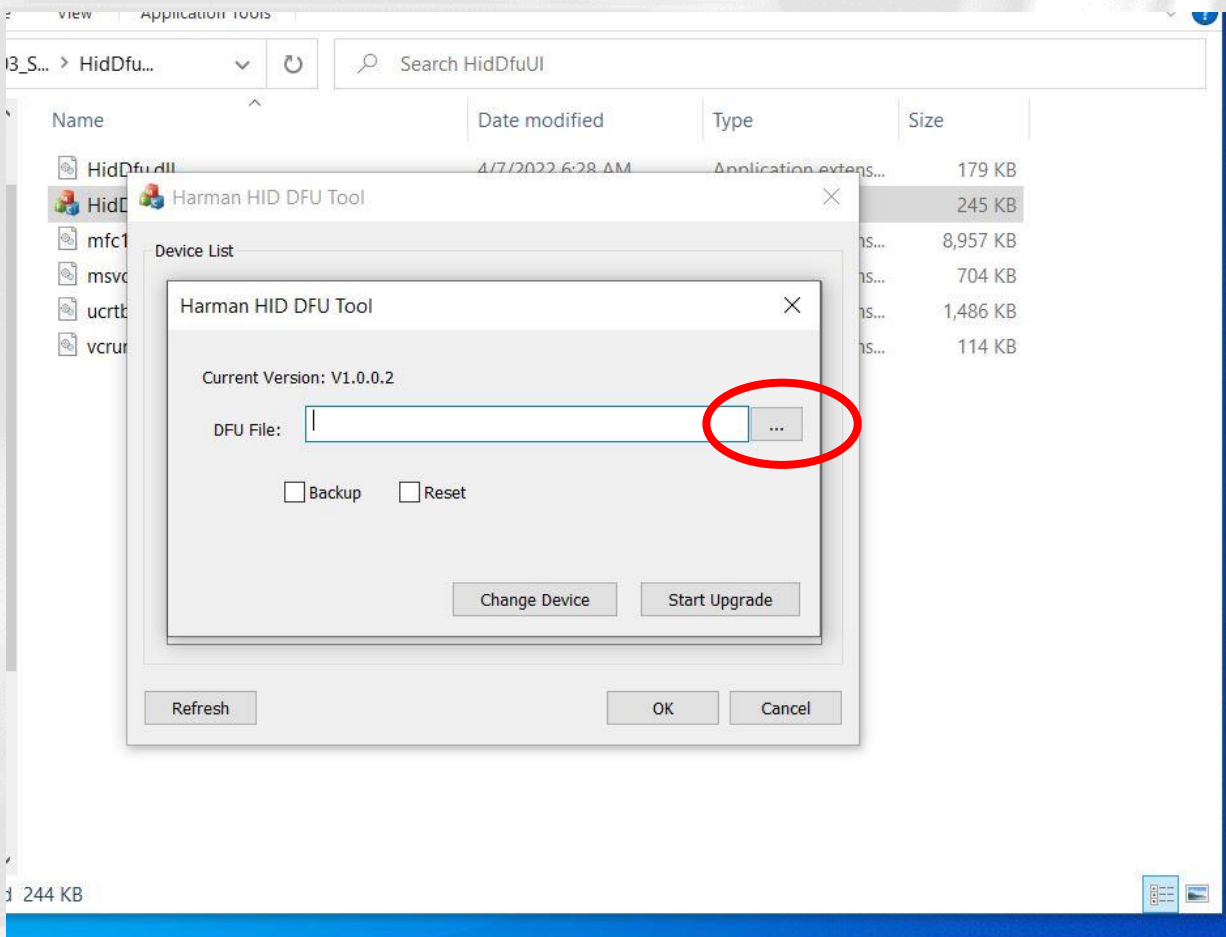




STARTING SOFTWARE UPDATE

Select “Reset” and “Start Upgrade”

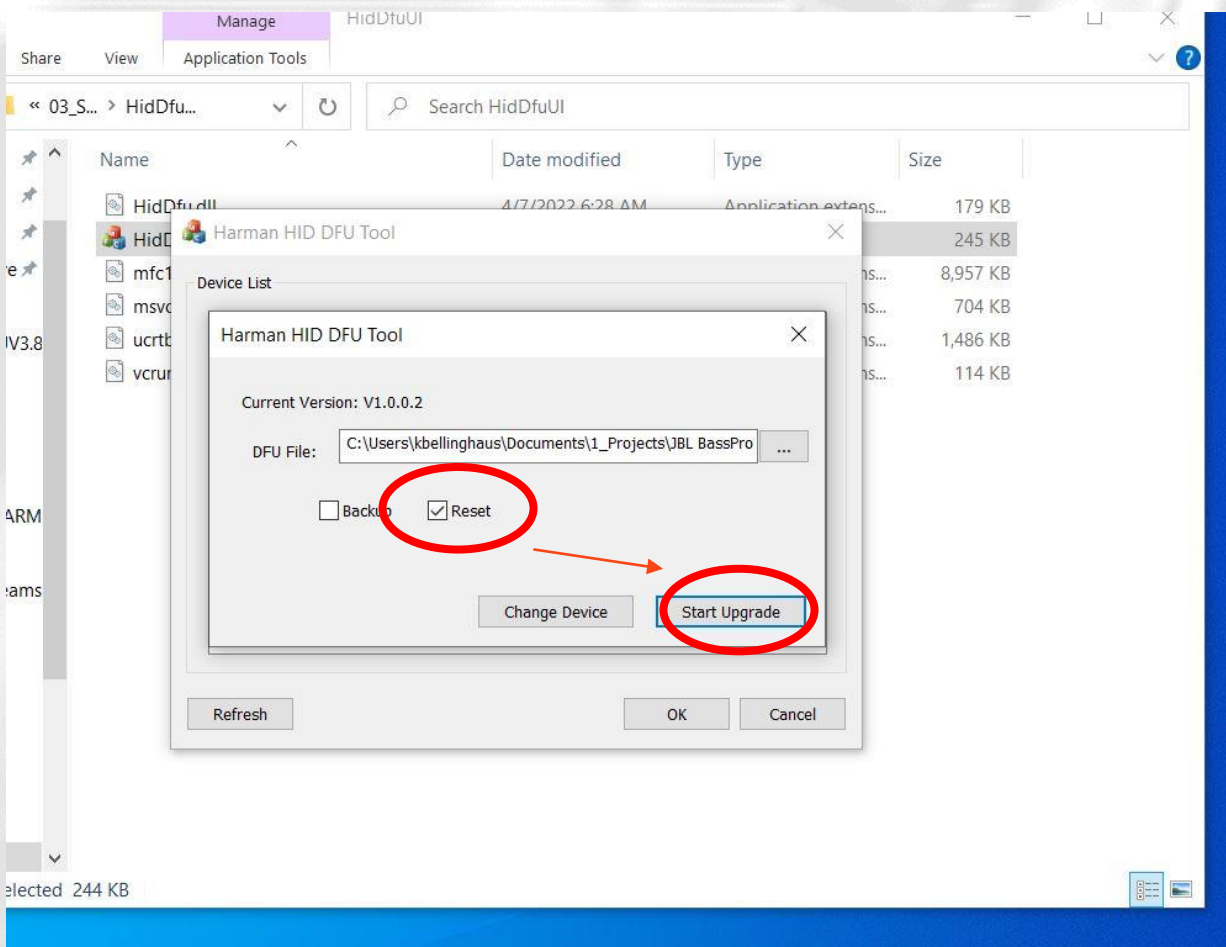

Select “Yes” to begin software update


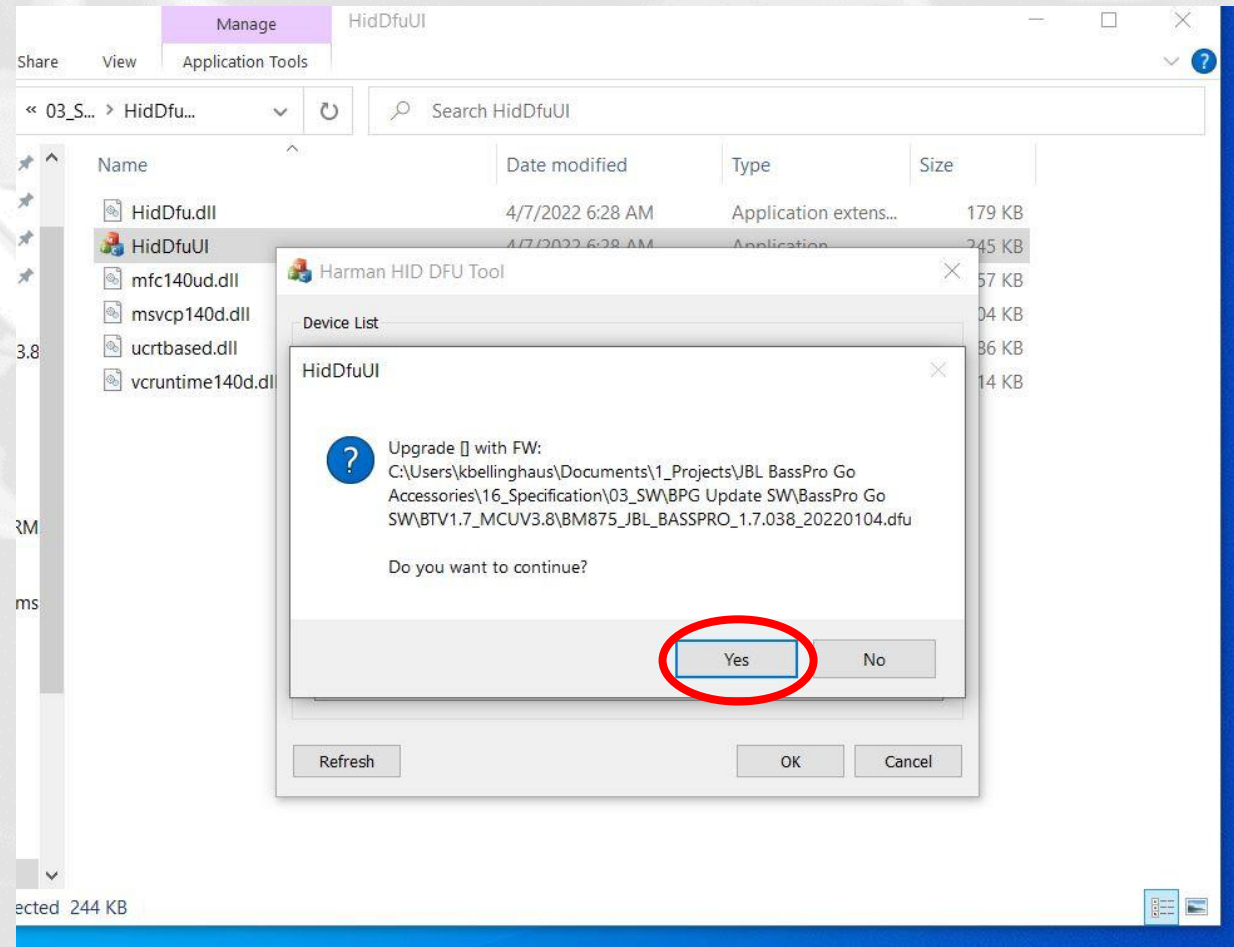




SOFTWARE UPDATE IN-PROGRESS AND COMPLETE

Software update in-progress, up to 30s

Software update complete, "Upgrade success!"
NOTE: Speaker must remain powered while "LED's" continue flashing, this may take 30s to 1min to complete.

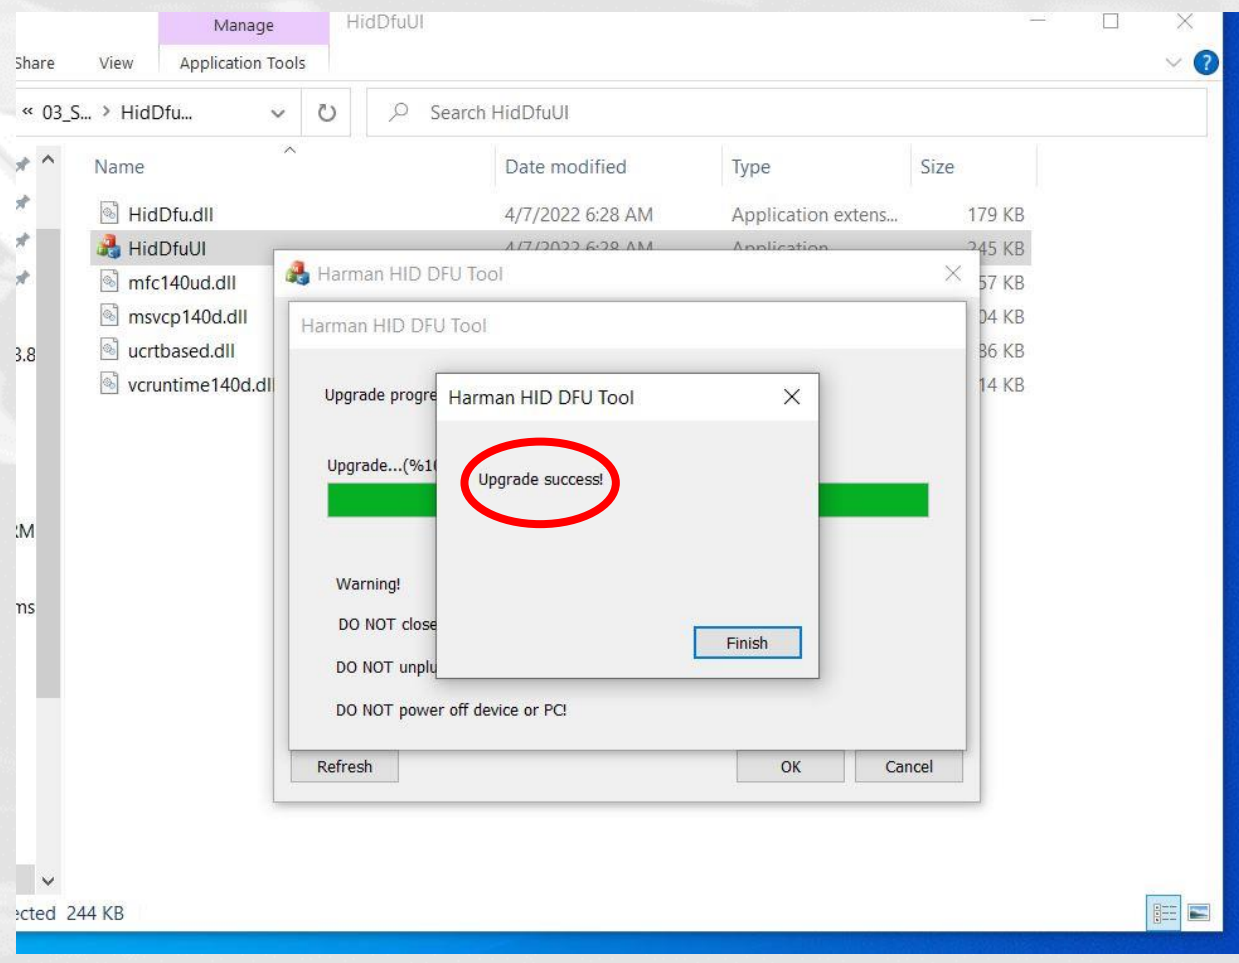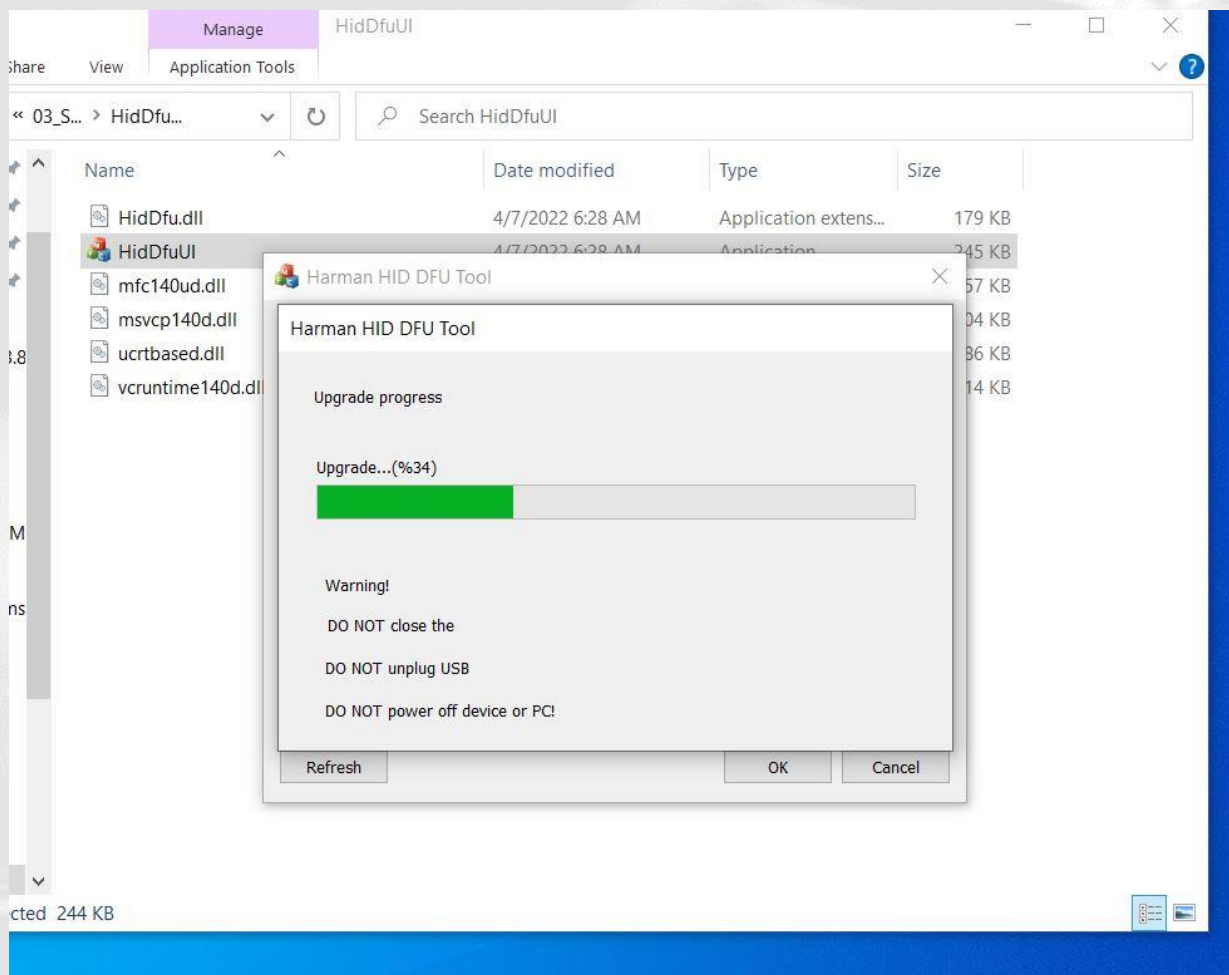



SPEAKER SELF-POWER CYCLE

Blinking LED Off

Blinking LED On

Blinking LED Off

Blinking LED On

Speaker LED's will flash off/on while updating firmware internally, approximately 30s.
Then, power off when software update is complete





SPEAKER SELF-POWER CYCLE

Speaker will reset power and enter in-vehicle subwoofer mode,
noted by White LED





RESETTING THE SPEAKER

Disconnect power connector & USB Mini



Turn on speaker by pressing power button





RESETTING THE SPEAKER

With power on, hold volume up “+” and play/pause until speaker turns off



Speaker turns off





TESTING TO ENSURE SUCCESSFUL UPDATE

Power speaker on



Connect home power adapter to AC outlet and connect to BassPro Go speaker





TESTING TO ENSURE SUCCESSFUL UPDATE

With home power adapter connected to AC outlet and speaker, the LED's will remain on.

NOTE: if LED's turn off, the software update was not successful and you must start from the beginning.

All steps are critical in the process for software update.

